


A6 Slide

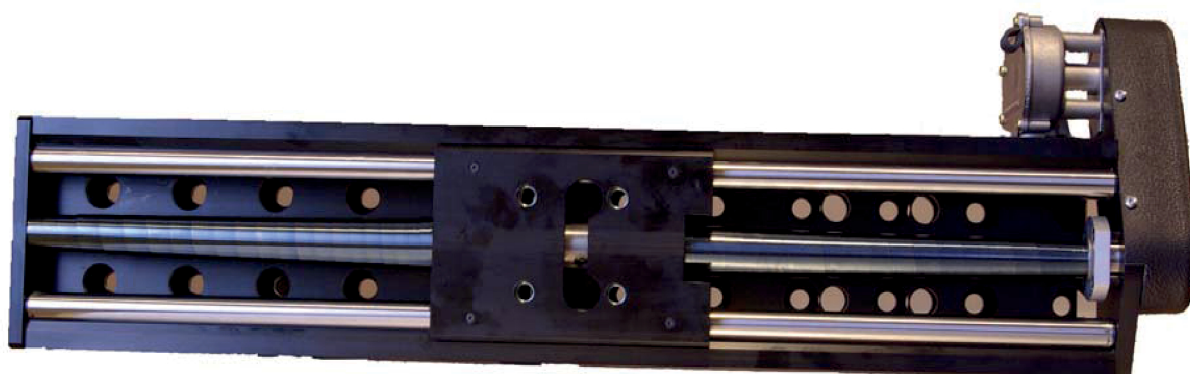

Spare parts list

Ordering number	Denomination	Notes	Max speed
0334 333 880	A6 Slide	Setting length = 60 mm	70 cm/min
0334 333 881	A6 Slide	Setting length = 120 mm	70 cm/min
0334 333 882	A6 Slide	Setting length = 180 mm	70 cm/min
0334 333 883	A6 Slide	Setting length = 240 mm	70 cm/min
0334 333 884	A6 Slide	Setting length = 300 mm	70 cm/min
0334 333 885	A6 Slide	Setting length = 420 mm	70 cm/min
0334 333 886	A6 Slide	Setting length = 540 mm	70 cm/min
0334 333 887	A6 Slide	Setting length = 730 mm	70 cm/min
0334 333 888	A6 Slide	Setting length = 1030 mm	70 cm/min
0334 333 924	A6 Slide	Setting length = 300 mm	330 cm/min
0334 333 940	A6 Slide	Setting length = 60 mm*	70 cm/min
0334 333 941	A6 Slide	Setting length = 120 mm*	70 cm/min
0334 333 942	A6 Slide	Setting length = 180 mm*	70 cm/min
0334 333 943	A6 Slide	Setting length = 240 mm*	70 cm/min
0334 333 944	A6 Slide	Setting length = 300 mm*	70 cm/min
0334 333 945	A6 Slide	Setting length = 420 mm*	70 cm/min
0334 333 946	A6 Slide	Setting length = 540 mm*	70 cm/min

* Optical pulse generator


Spare parts may be ordered through your nearest ESAB dealer, see esab.com. When ordering, please state product type, serial number, denominations and ordering numbers according to the spare parts list. This facilitates dispatch and ensures correct delivery.

Maintenance and repair work should be performed by an experienced person, and electrical work only by a trained electrician. Use only recommended spare parts.

TABLE OF CONTENTS

1	SPARE PARTS	4
1.1	Wear parts	15
1.2	Accessories	15

1 SPARE PARTS

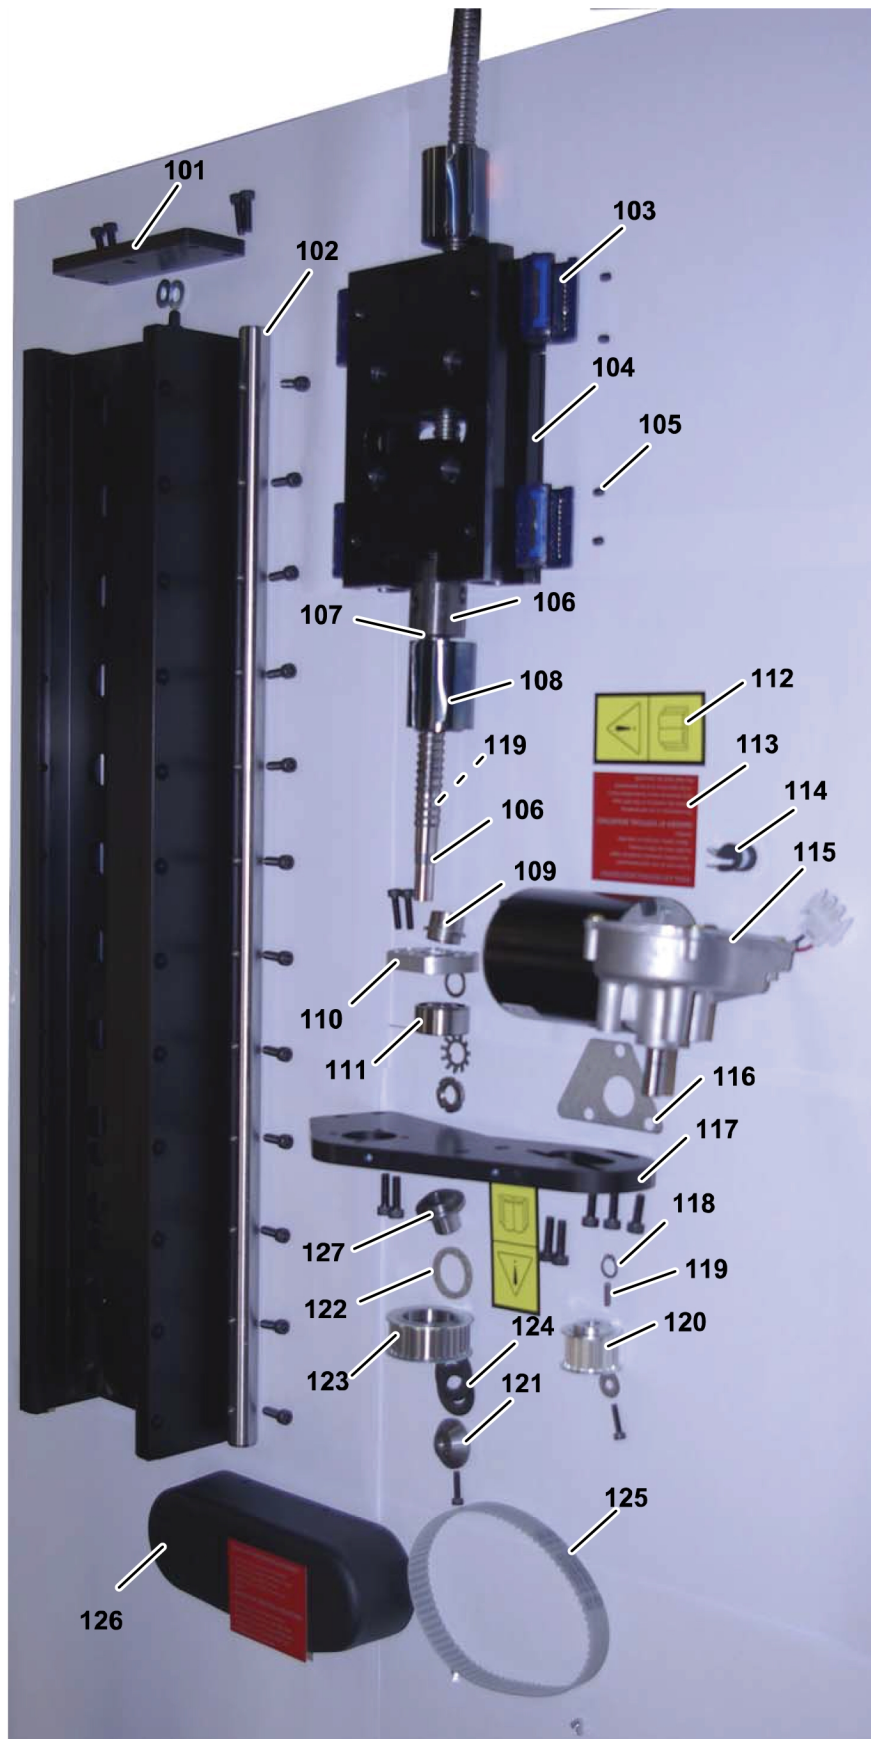


1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=60	L=120	L=180	L=240	L=300	
	0334 333	A6 Slide	880	881	882	883	884	
101	0461 221 001	End washer	1	1	1	1	1	
102	0334 323 001	Steel shaft	2	-	-	-	-	L=242.5
	0334 323 002	Steel shaft	-	2	-	-	-	L=302.5
	0334 323 003	Steel shaft	-	-	2	-	-	L=362.5
	0334 323 004	Steel shaft	-	-	-	2		L=422.5
	0334 323 005	Steel shaft	-	-	-	-	2	L=482.5
103	0334 337 001	Ball bushing open	4	4	4	4	4	2 sealed
104	0334 331 880	Runner for slide	1	1	1	1	1	
105	0190 509 321	Stop screw	8	8	8	8	8	M5×6
106	0334 332 001	Ball screw and nut	1	-	-	-	-	L216
	0334 332 002	Ball screw and nut	-	1	-	-	-	L276
	0334 332 003	Ball screw and nut	-	-	1	-	-	L336
	0334 332 004	Ball screw and nut	-	-	-	1		L396
	0334 332 005	Ball screw and nut	-	-	-	-	1	L392.5
107	0334 325 001	Bellow steering	2	2	-	-	-	
108	0333 441 002	Telescopic bellows	2	2	-	-	-	D30/20
	0156 726 003	Telescopic bellows	-	-	2	2	2	D40/20
109	0334 324 001	Bellow steering	1	1	1	1	1	D=20
110	0154 457 002	Ball bearing cap	1	1	1	1	1	
111	0190 531 201	Bearing	1	1	1	1	1	SKF 3201
112	0443 719 001	Sign	2	2	2	2	2	
113	0334 472 001	Warning sign	2	2	2	2	2	
114	0417 699 002	Clamp	1	1	1	1	1	
115	0334 322 001	Geared motor	1	1	1	1	1	24 V, 110 rpm
116	0334 321 001	Washer	1	1	1	1	1	Cover plate
117	0461 223 001	Motor bracket	1	1	1	1	1	
118	0215 701 007	Circlip	1	1	1	1	1	D10
119	0215 701 209	Flat wedge	2	2	2	2	2	3×3×14
120	0334 328 002	Toothed pulley	1	1	1	1	1	z=19
121	0334 330 880	Compression washer complete	1	1	1	1	1	

1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=60	L=120	L=180	L=240	L=300	
122	0334 327 001	Friction ring	1	1	1	1	1	
123	0334 328 001	Toothed pulley	1	1	1	1	1	z=30
124	0219 504 411	Spring washer	2	2	2	2	2	D31.5 / 16×1.2
125	0334 342 001	Cog belt	1	1	1	1	1	L=400 / 80 T
126	0334 320 001	Belt guard	1	1	1	1	1	
127	0334 329 001	Friction pin	1	1	1	1	1	

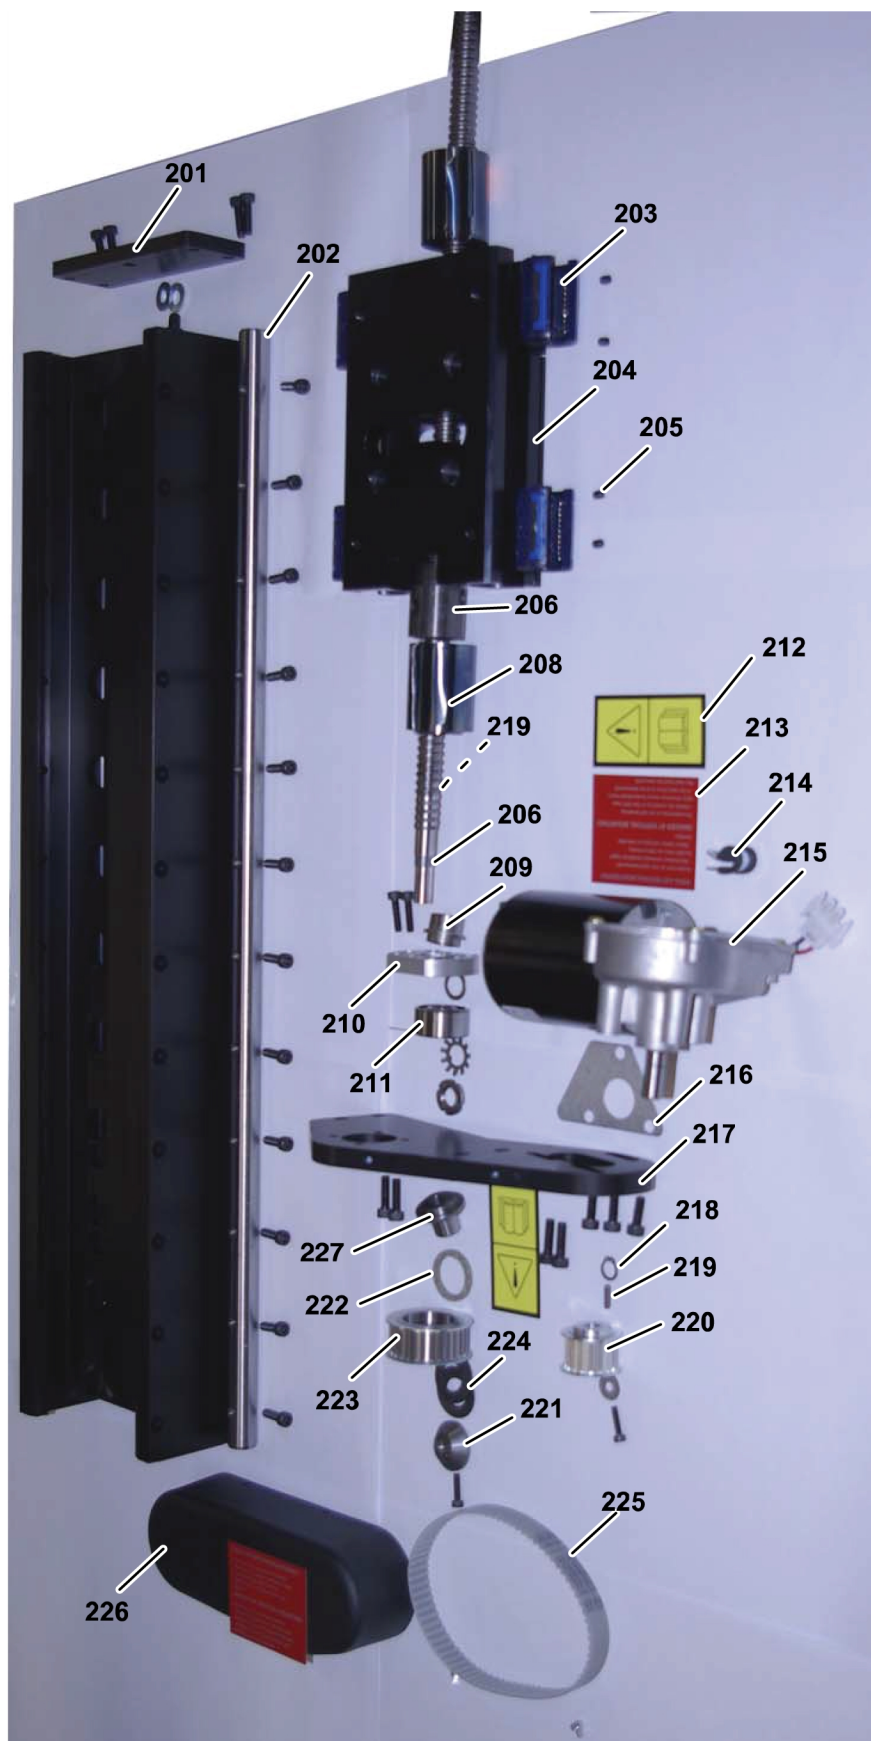


1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=420	L=540	L=730	L=1030	L=300	
	0334 333	A6 Slide	885	886	887	888	924	
201	0461 221 001	End washer	1	1	1	1	1	
202	0334 323 006	Steel shaft	2	-	-	-	-	L=602.5
	0334 323 007	Steel shaft	-	2	-	-	-	L=722.5
	0334 323 008	Steel shaft	-	-	2	-	-	L=962.5
	0334 323 009	Steel shaft	-	-	-	2	-	L=1322.5
	0334 323 005	Steel shaft	-	-	-	-	2	L=482.5
203	0334 337 001	Ball bushing open	4	4	4	4	4	2 sealed
204	0334 331 880	Runner for slide	1	1	1	1	1	
205	0190 509 321	Stop screw	8	8	8	8	8	M5×6
206	0334 332 006	Ball screw and nut	1	-	-	-	-	L576
	0334 332 007	Ball screw and nut	-	1	-	-	-	L633.5
	0334 332 008	Ball screw and nut	-	-	1	-	-	L1006
	0334 332 009	Ball screw and nut	-	-	-	1	-	L1366
	0334 332 005	Ball screw and nut	-	-	-	-	1	L392.5
208	0156 726 003	Telescopic bellows	2	2	2	4	2	D30/20
209	0334 324 001	Bellow steering	1	1	-	-	1	D=20
	0334 324 003	Bellows guide, outer	-	-	1	-	-	
	0334 344 001	Bellows guide, center	-	-	2	-	-	
	0334 324 005	Bellows guide, outer	-	-	1	-	-	
	0334 324 004	Bellows guide, outer	-	-	-	1	-	
	0334 344 001	Bellows guide, center	-	-	-	1	-	
	0334 324 006	Bellows guide, outer	-	-	-	1	-	
210	0154 457 002	Ball bearing cap	1	1	1	1	1	
211	0190 531 201	Bearing	1	1	1	1	1	SKF 3201
212	0443 719 001	Sign	2	2	2	2	2	
213	0334 472 001	Warning sign	2	2	2	2	2	
214	0417 699 002	Clamp	1	1	1	1	1	
215	0334 322 001	Geared motor	1	1	1	1	-	24 V, 110 rpm

1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=420	L=540	L=730	L=1030	L=300	
	0334 322 002	Geared motor	-	-	-	-	1	24 V, 200 rpm
216	0334 321 001	Washer	1	1	1	1	1	Cover plate
217	0461 223 001	Motor bracket	1	1	1	1	1	
218	0215 701 007	Circlip	1	1	1	1	1	D10
219	0215 701 209	Flat wedge	2	2	2	2	2	3×3×14
220	0334 328 002	Toothed pulley	1	1	1	1	1	z=19
221	0334 330 880	Compression washer complete	1	1	1	1	1	
222	0334 327 001	Friction ring	1	1	1	1	1	
223	0334 328 001	Toothed pulley	1	1	1	1	1	z=30
224	0219 504 411	Spring washer	2	2	2	2	2	D31.5 / 16×1.2
225	0334 342 001	Cog belt	1	1	1	1	1	L=400 / 80 T
226	0334 320 001	Belt guard	1	1	1	1	1	
227	0334 329 001	Friction pin	1	1	1	1	1	

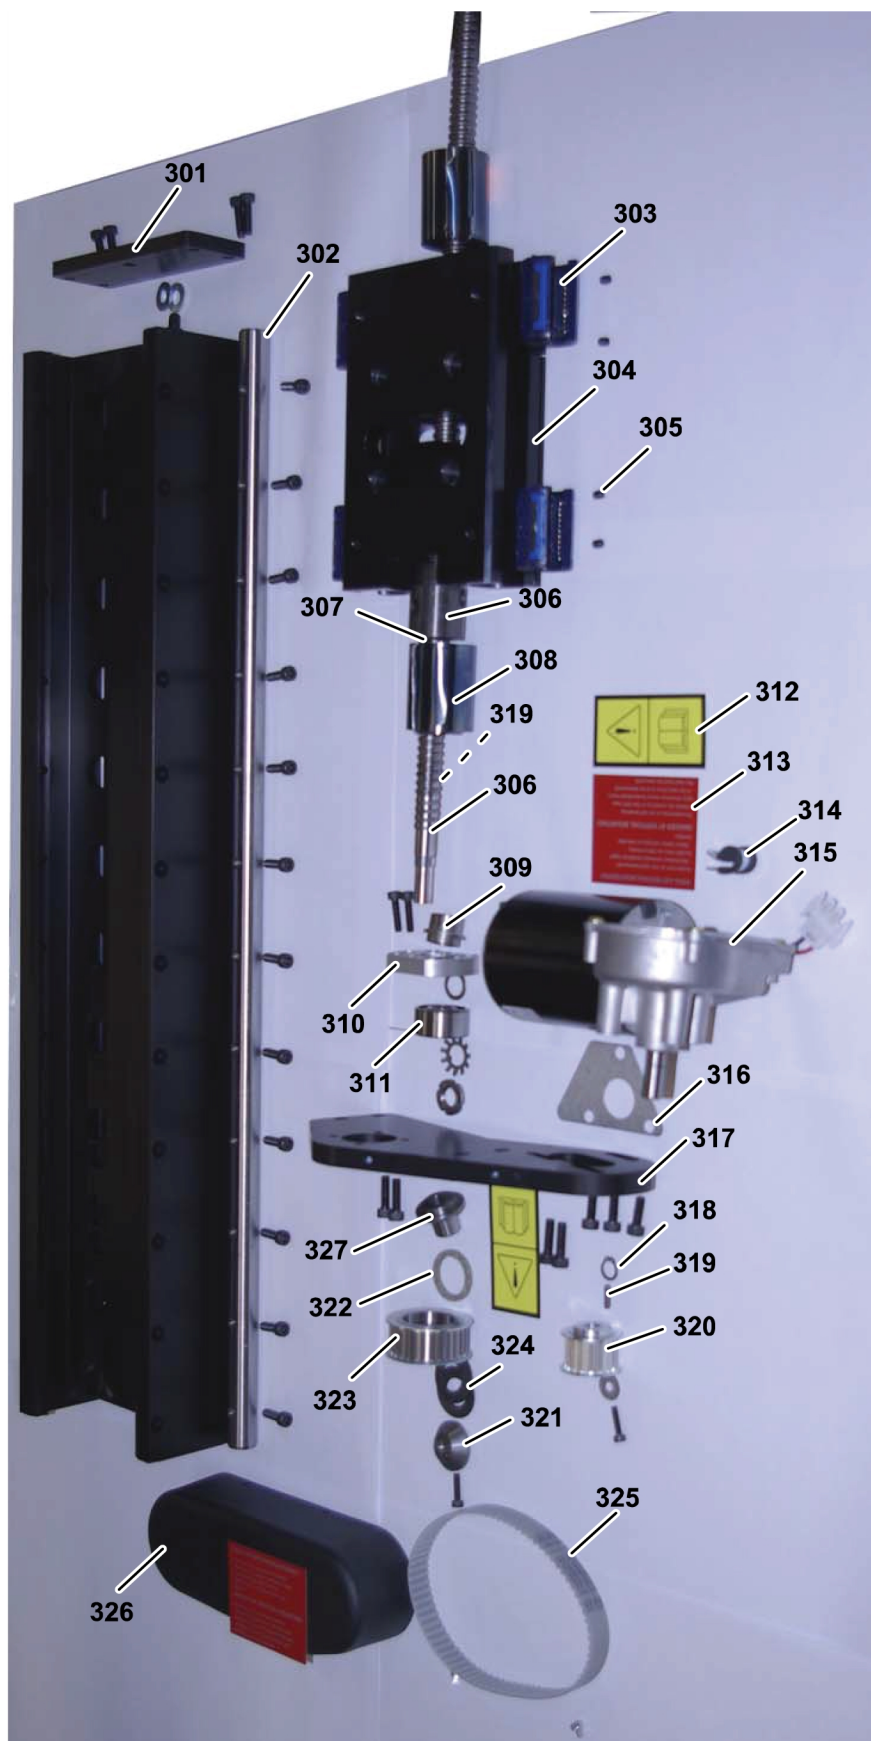


1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=60	L=120	L=180	L=240	L=300	
	0334 333	A6 Slide	940	941	942	943	944	
301	0461 221 001	End washer	1	1	1	1	1	
302	0334 323 001	Steel shaft	2	-	-	-	-	L=242.5
	0334 323 002	Steel shaft	-	2	-	-	-	L=302.5
	0334 323 003	Steel shaft	-	-	2	-	-	L=362.5
	0334 323 004	Steel shaft	-	-	-	2	-	L=422.5
	0334 323 005	Steel shaft	-	-	-	-	2	L=482.5
303	0334 337 001	Ball bushing open	4	4	4	4	4	2 sealed
304	0334 331 880	Runner for slide	1	1	1	1	1	
305	0190 509 321	Stop screw	8	8	8	8	8	M5×6
306	0334 332 001	Ball screw and nut	1	-	-	-	-	L216
	0334 332 002	Ball screw and nut	-	1	-	-	-	L276
	0334 332 003	Ball screw and nut	-	-	1	-	-	L336
	0334 332 004	Ball screw and nut	-	-	-	1	-	L396
	0334 332 005	Ball screw and nut	-	-	-	-	1	L392.5
307	0334 325 001	Bellow steering	2	2	-	-	-	
	0334 325 003	Bellow steering	-	-	2	-	-	
308	0333 441 002	Telescopic bellows	2	2	-	-	-	D30/20
	0333 441 005	Telescopic bellows	-	-	2	2	-	D35/20
	0156 726 003	Telescopic bellows	-	-	-	-	2	D40/20
309	0334 324 001	Bellow steering	1	1	1	1	1	D=20
310	0154 457 002	Ball bearing cap	1	1	1	1	1	
311	0190 531 201	Bearing	1	1	1	1	1	SKF 3201
312	0443 719 001	Sign	2	2	2	2	2	
313	0334 472 001	Warning sign	2	2	2	2	2	
314	0417 699 002	Clamp	1	1	1	1	1	
315	0449 295 001	Drive unit	1	1	1	1	1	24 V, with pulse generator
316	0334 321 001	Washer	1	1	1	1	1	Cover plate
317	0461 223 001	Motor bracket	1	1	1	1	1	
318	0215 701 007	Circlip	1	1	1	1	1	D10

1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)					Notes
			L=60	L=120	L=180	L=240	L=300	
319	0215 701 209	Flat wedge	2	2	2	2	2	3×3×14
320	0334 328 002	Toothed pulley	1	1	1	1	1	z=19
321	0334 330 880	Compression washer complete	1	1	1	1	1	
322	0334 327 001	Friction ring	1	1	1	1	1	
323	0334 328 001	Toothed pulley	1	1	1	1	1	z=30
324	0219 504 411	Spring washer	2	2	2	2	2	D31.5 / 16×1.2
325	0334 342 001	Cog belt	1	1	1	1	1	L=400 / 80 T
326	0334 320 001	Belt guard	1	1	1	1	1	
327	0334 329 001	Friction pin	1	1	1	1	1	

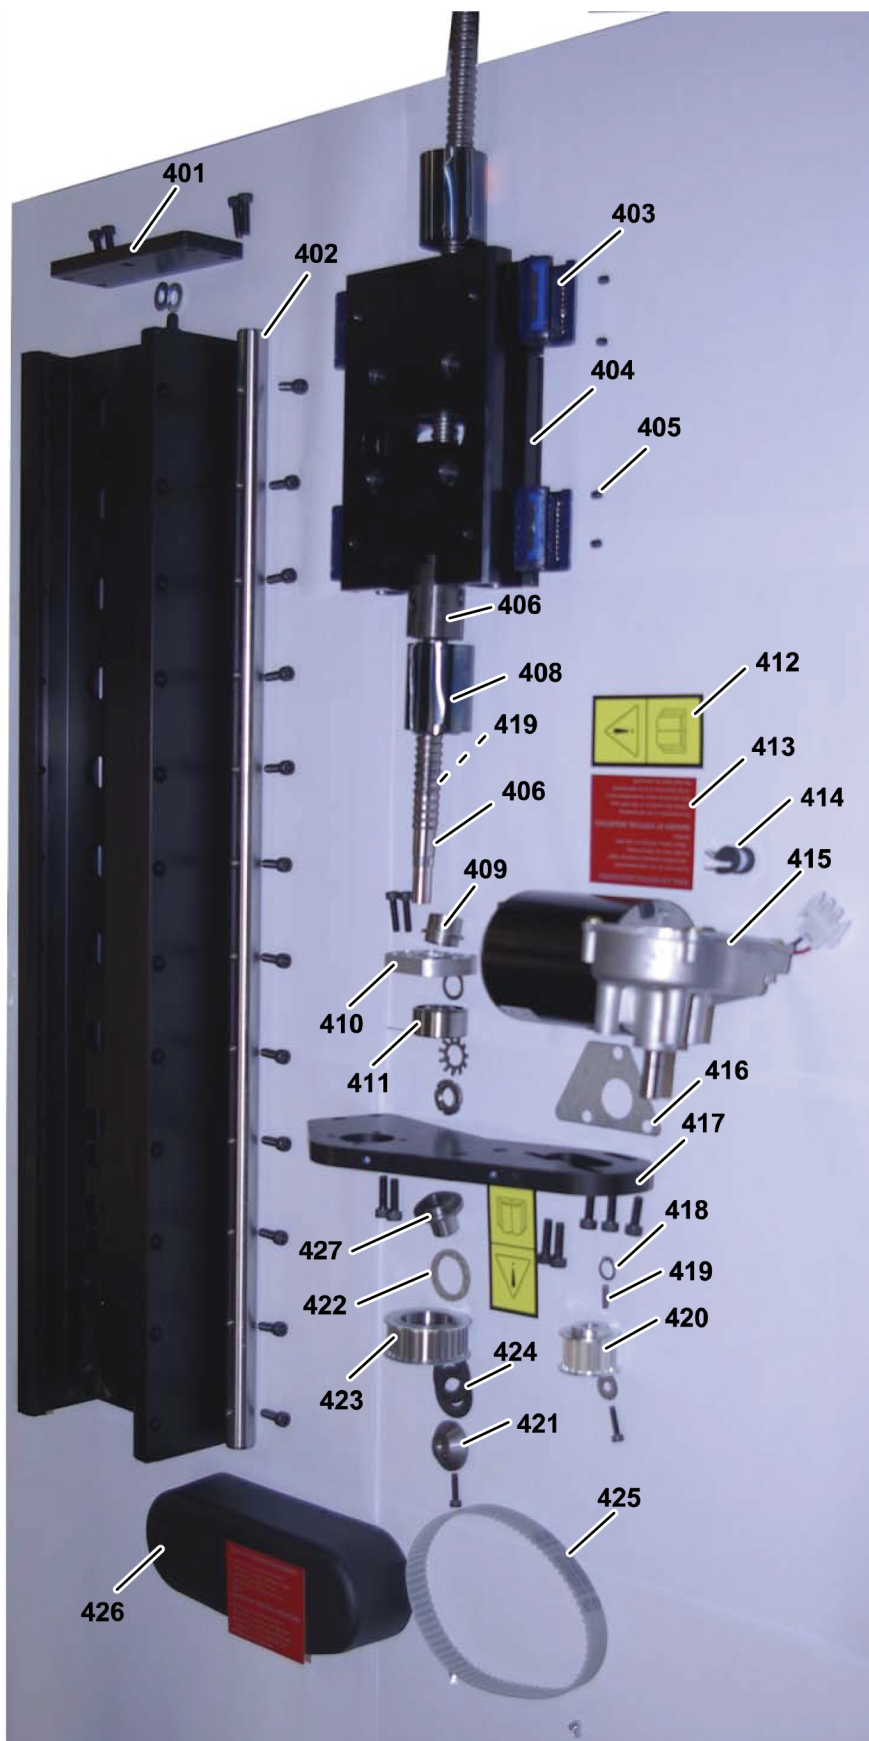

1 SPARE PARTS

Item	Ordering no.	Denomination	L=Setting length (mm)		Notes
			L=420	L=540	
	0334 333	A6 Slide	945	946	
401	0461 221 001	End washer	1	1	
402	0334 323 006	Steel shaft	2	-	L=602.5
	0334 323 007	Steel shaft	-	2	L=722.5
403	0334 337 001	Ball bushing open	4	4	2 sealed
404	0334 331 880	Runner for slide	1	1	
405	0190 509 321	Stop screw	8	8	M5×6
406	0334 332 006	Ball screw and nut	1	-	L576
	0334 332 007	Ball screw and nut	-	1	L633.5
408	0156 726 003	Telescopic bellows	2	2	D40/20
409	0334 324 001	Bellow steering	1	1	D=20
410	0154 457 002	Ball bearing cap	1	1	
411	0190 531 201	Bearing	1	1	SKF 3201
412	0443 719 001	Sign	2	2	
413	0334 472 001	Warning sign	2	2	
414	0417 699 002	Clamp	1	1	
415	0449 295 001	Geared motor wit	1	1	24 V, with pulse generator
416	0334 321 001	Washer	1	1	
417	0461 223 001	Motor bracket	1	1	
418	0215 701 007	Circlip	1	1	D10
419	0215 701 209	Flat wedge	2	2	3×3×14
420	0334 328 002	Toothed pulley	1	1	z=19
421	0334 330 880	Compression washer comp.	1	1	
422	0334 327 001	Friction ring	1	1	
423	0334 328 001	Toothed pulley	1	1	z=30
424	0219 504 411	Spring washer	2	2	D31.5 / 16×1.2
425	0334 342 001	Cog belt	1	1	L=400 / 80 T
426	0334 320 001	Belt guard	1	1	
427	0334 329 001	Friction pin	1	1	

1.1 Wear parts



Ordering number	Denomination	Notes
0334 342 001	Cog belt	L400/80T

1.2 Accessories

Motor cable, A6 Slide - Control box A6 GMH, A6 PAV and A6 FAA		
0460 745 880	2 m	
0460 745 881	5 m	
0460 745 882	10 m	
0460 745 883	16 m	
0460 745 884	19 m	
0460 745 885	22 m	
0460 745 886	25 m	
0460 745 887	28 m	
0460 745 888	32 m	
0460 745 889	35 m	



A WORLD OF PRODUCTS AND SOLUTIONS.



For contact information visit <http://esab.com>

ESAB AB, Lindholmsallén 9, Box 8004, 402 77 Gothenburg, Sweden, Phone +46 (0) 31 50 90 00

<https://manuals.esab.com/>

